


PRACTICAL NO :10

AIM Firewall Configuration and Rule-based Filtering

Checked Windows Firewall status


Opened Advanced Settings

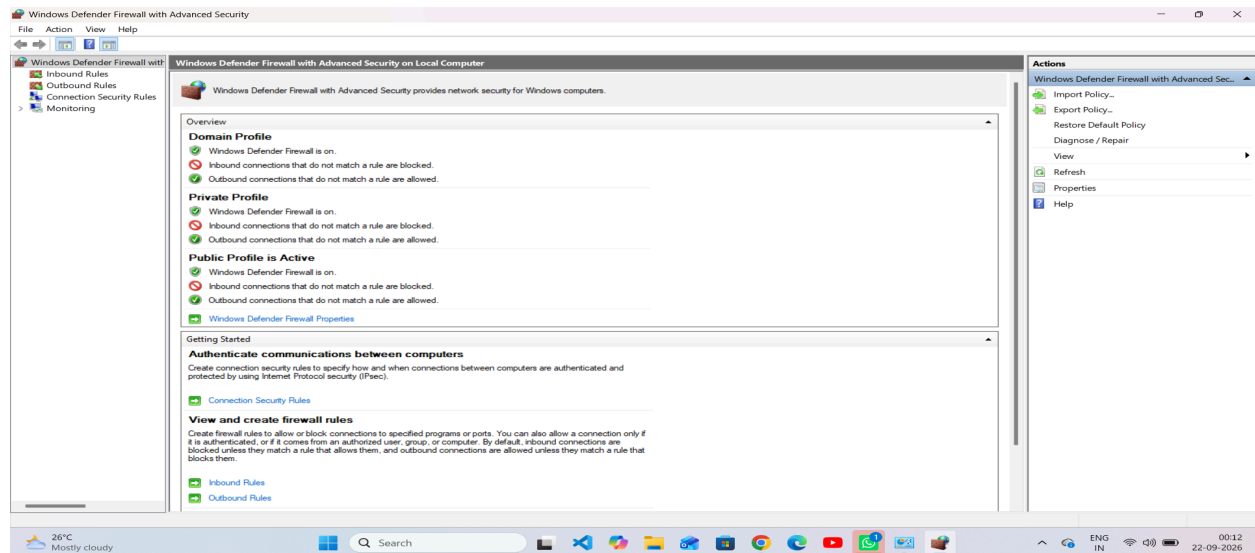

Inbound Rules section select

Left panel mein 'Inbound Rules' pe click kiya, phir right side Actions panel se 'New Rule...' select
Rule Type: Port → Protocol: TCP → Specific local port: 8080 → Action: 'Allow the connection' →
Profile: All → Name: 'Allow-Port-8080' → Finish.

Same process repeat kiya – Port: TCP 23 → Action: 'Block the connection' → Name: 'Block-Port-23'
→ Finish. Ab dono rules Inbound Rules list mein dikh rahe the (Allow = green tick, Block = red icon).

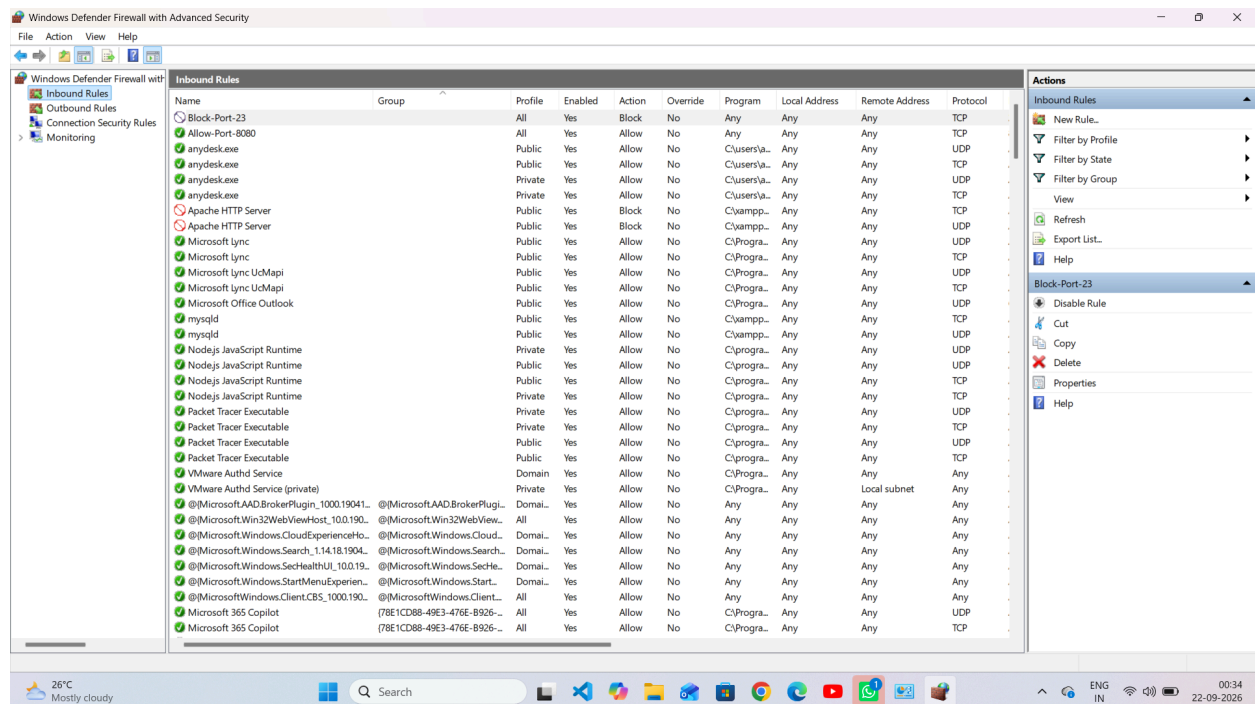

Tested rules using PowerShell

PRACTICAL NO :10

```
Windows PowerShell

ComputerName      : localhost
RemoteAddress     : ::1
RemotePort        : 23
InterfaceAlias    : Loopback Pseudo-Interface 1
SourceAddress     : ::1
PingSucceeded     : True
PingReplyDetails (RTT) : 0 ms
TcpTestSucceeded  : False

PS C:\WINDOWS\System32> Test-NetConnection -ComputerName localhost -Port 8080
WARNING: TCP connect to (::1 : 8080) failed
WARNING: TCP connect to (127.0.0.1 : 8080) failed

ComputerName      : localhost
RemoteAddress     : ::1
RemotePort        : 8080
InterfaceAlias    : Loopback Pseudo-Interface 1
SourceAddress     : ::1
PingSucceeded     : True
PingReplyDetails (RTT) : 0 ms
TcpTestSucceeded  : False
```

Verified the Allow rule using a listener

```
Windows PowerShell
Copyright (C) Microsoft Corporation. All rights reserved.

PS C:\Users\ADMIN> Test-NetConnection -ComputerName localhost -Port 8080
WARNING: TCP connect to (::1 : 8080) failed

ComputerName      : localhost
RemoteAddress     : 127.0.0.1
RemotePort        : 8080
InterfaceAlias    : Loopback Pseudo-Interface 1
SourceAddress     : 127.0.0.1
TcpTestSucceeded  : True
```